



Instructions Manual

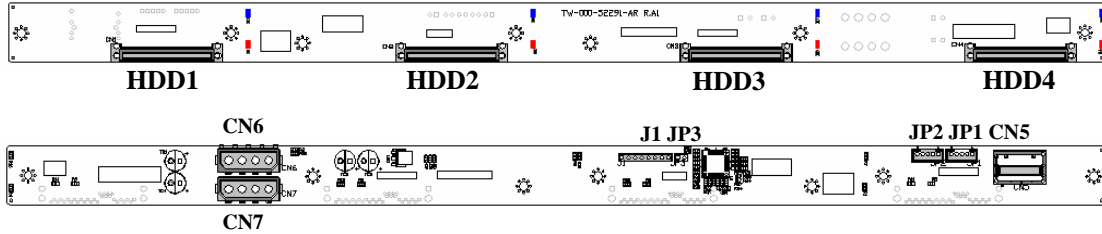

CN6,CN7:


4Pin Power connector for +12V and +5V Power input

JP1: External HDD Accessing LED Input (Active Low)

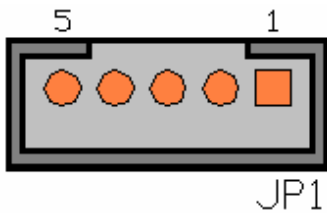


Pin no.	Description
1	GND
2	HDD1
3	HDD2
4	HDD3
5	HDD4

JP2: External HDD Fail LED Input (Active Low)

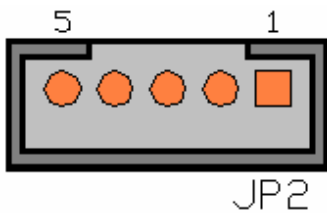

Pin no.	Description
1	GND
2	HDD1
3	HDD2
4	HDD3
5	HDD4

 JP3: HDD Access LED Select



Status	Description
Close	LED Active from JP1
Open	LED Active from HDD

J1: Firmware Update (Factory use only)

CN5: Mini SAS 36pin

Signal	Pin no.	Signal	Pin no.
Rx 0+	A2	Tx 0+	B2
Rx 0-	A3	Tx 0-	B3
Rx 1+	A5	Tx 1+	B5
Rx 1-	A6	Tx 1-	B6
Sideband 0	A8	Sideband 7	B8
Sideband 1	A9	Sideband 3	B9
Sideband 2	A10	Sideband 4	B10
Sideband 6	A11	Sideband 5	B11
Rx 2+	A13	Tx 2+	B13
Rx 2-	A14	Tx 2-	B14
Rx 3+	A16	Tx 3+	B16
Rx 3-	A17	Tx 3-	B17
Signal	A1,A4,A7,A12,A15,A18		
Ground	B1,B4,B7,B12,B15,B18		

* Side band has no function in this board